

---

# User Guide

Nokia 300

**NOKIA**

---

# Contents

<b>Get started.....</b>	<b>7</b>
Keys and parts.....	7
Insert the SIM card and battery.....	9
Insert a memory card.....	10
Charge the battery.....	11
Charge the battery over USB.....	12
Switch on.....	13
Explore your phone.....	14
Lock the keys and screen .....	15
Change the volume.....	16
Attach a strap.....	16
Copy content from your old phone.....	17
Use your phone offline.....	18
Indicators.....	18
 <b>Phone basics.....</b>	 <b>20</b>
Change the time and date.....	20
Set an alarm.....	21
Add an appointment.....	22
Remember a birthday.....	23
Lunar calendar.....	24
Use the calculator.....	25
Convert currencies.....	26
Convert measures.....	27

---

Translate Chinese to English.....	28
Download a game or app.....	29
<b>Calls.....</b>	<b>30</b>
Make a call .....	30
View your missed calls.....	31
Call the last dialled number.....	32
Call several people at the same time.....	33
Forward calls to your voicemail or another phone number.....	34
Prevent making or receiving calls.....	35
<b>Contacts.....</b>	<b>36</b>
Save a name and phone number.....	36
Make calls quickly.....	37
Create a contact group.....	38
Move or copy contacts to your SIM card.....	39
<b>Personalisation.....</b>	<b>40</b>
Change your ringtone.....	40
Add a shortcut to your home screen.....	41
Personalise your home screen.....	42
Create your own profile.....	43
<b>Messaging.....</b>	<b>44</b>
Send a message.....	44
Send a message to a group of people.....	45

---

Write text.....	46
Save an attachment.....	47
Check your voicemail.....	48
Send an audio message .....	49

## **Mail and chat .....50**

Set up your mail account.....	50
Send a mail.....	51
Chat with your friends.....	52

## **Photos and videos.....53**

Take a photo.....	53
Record a video.....	54
Organise your photos.....	55
Edit a photo.....	56
Send a photo or video.....	57

## **Music and audio.....58**

Copy music from your PC.....	58
Play a song.....	59
Connect loudspeakers to your phone.....	60
Listen to the radio.....	61
Record sound clips.....	62

## **Web .....63**

Browse the web.....	63
---------------------	----

---

Clear browsing history.....	64
-----------------------------	----

<b>Connectivity .....</b>	<b>65</b>
---------------------------	-----------

Connect to a wireless headset.....	65
------------------------------------	----

Protect your phone.....	66
-------------------------	----

Copy content between your phone and a computer.....	67
---	----

<b>Protect your phone.....</b>	<b>68</b>
--------------------------------	-----------

Lock your phone.....	68
----------------------	----

Password protect your memory card.....	69
--	----

Format a memory card.....	70
---------------------------	----

Prepare your phone for recycling.....	71
---------------------------------------	----

<b>Support and updates.....</b>	<b>72</b>
---------------------------------	-----------

Support.....	72
--------------	----

Back up content to a memory card.....	73
---------------------------------------	----

About phone software updates .....	74
------------------------------------	----

Update phone software using your PC.....	75
--	----

Update phone software using your phone.....	76
---	----

Restore original settings.....	77
--------------------------------	----

Access codes.....	78
-------------------	----

<b>Nokia original accessories.....</b>	<b>80</b>
--	-----------

Practical rules about accessories.....	80
--	----

Battery.....	80
--------------	----

<b>Product and safety information.....</b>	<b>81</b>
--	-----------

---

<b>Index.....</b>	<b>117</b>
-------------------	------------

 
# Get started

## Keys and parts



- 1 Earpiece
- 2 Touch screen
- 3 End key
- 4 Keypad

- 5 Microphone
- 6 Call key
- 7 Messaging key

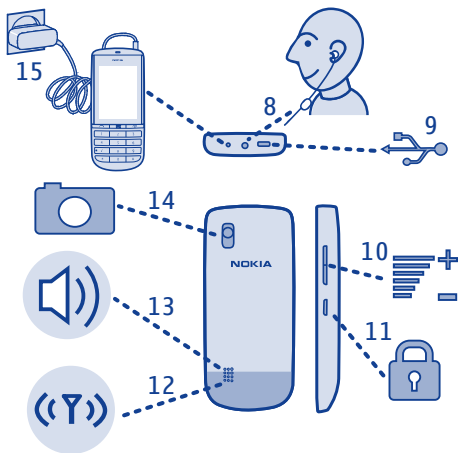

- 8** Headset connector
- 9** Micro-USB connector
- 10** Volume keys
- 11** Key lock button

- 12** Antenna area
- 13** Loudspeaker
- 14** Camera lens
- 15** Charger connector

If there is protective tape on the screen or camera lens, remove the tape.




## Insert the SIM card and battery



 Switch the phone off, then remove the back cover.




Lower the holder, then slide it locked.

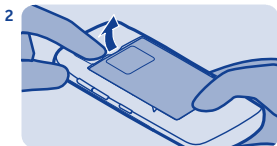


If the battery is in the phone, lift it out.



 Line up the battery contacts, then push the battery in.

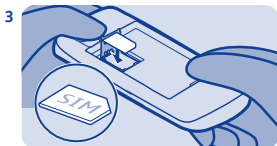

 Slide and lift the holder. Put the SIM in with the contact area face down.

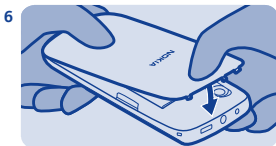

Replace the back cover. See ➡ 5 in "Feature specific instructions".

## Insert a memory card

1

 


Remove the back cover.




**Tip:** To remove the card, push it in until it's free, then pull it out.

2

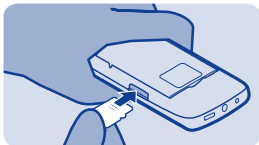

Push the card in with the contact area face down until it locks into place.

 
3

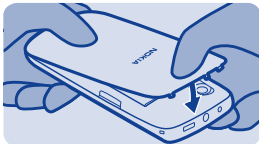

Replace the back cover. See ➡ 4.

---

## Charge the battery

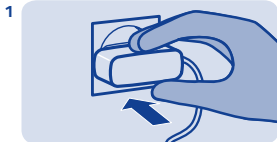 

Plug the charger into a wall outlet.



Connect the charger to the phone.  
See ➡ 7, 8.



Battery full? Unplug from the phone,  
then from the wall outlet.



## **Charge the battery over USB**

Battery low, but you don't have a charger with you? You can use a compatible USB cable to connect to a compatible device, such as a computer.

 
To avoid breaking the charger connector, do not turn or twist the cable when connecting or unplugging the charger cable.

See ➡ 3.


## Switch on




Press and hold the power key until the phone vibrates.

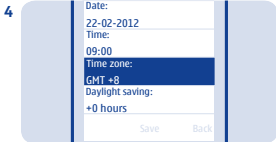

 
Select the time zone, then select if daylight saving time is used.

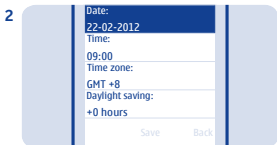

 Select the date, then type in the day, month, and year.

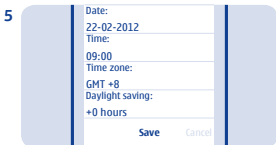

Select **Save**.

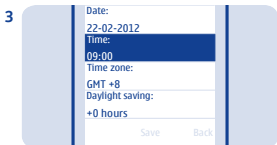 

Select the time, then type in the hours and minutes.




**Tip:** To switch the phone off, press and hold the power key.

## Explore your phone



 To see the features and apps in your phone, press **Menu**.

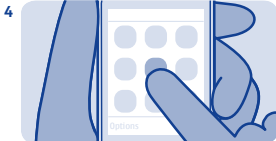


Tap an app or other item to open it.




To go back to the previous view, press **Back**.



 Tap and hold an item to see more options.

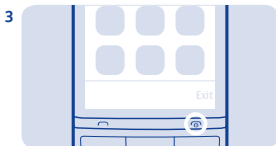


To go back to the home screen, press .



To swipe, steadily slide your finger to the desired direction.

## Lock the keys and screen

 7

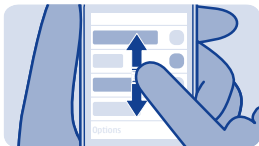

To scroll, slide your finger quickly up or down, then lift your finger. See ➡ 1.



 
Lock the keys and screen when not using your phone.

1



To lock, press the key lock button.

2

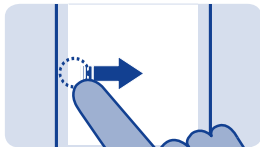


To unlock, press the key lock button, then swipe right along the arrow.

## Change the volume



 Is the volume too loud during a call or when listening to the radio?

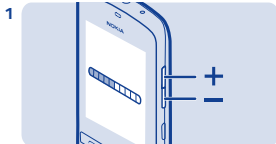

Use the volume keys.




Better.


## Attach a strap



 Remove the back cover.

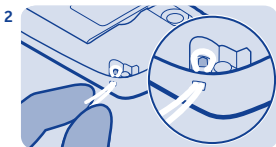

 Push the loop through the hole, then put it over the hook.

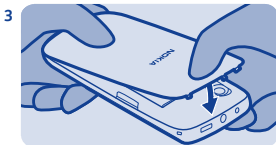

Replace the back cover.






## Copy content from your old phone

Easily get your contacts, calendar, and other stuff to your new phone.

1. Switch Bluetooth on in both phones.
2. On your new phone, select **Menu > Settings** and **Sync & backup > Phone switch**.
3. Select **Copy to this** and what you want to copy, then select **Done**.
4. Select your old phone from the list of found devices.
5. If asked, create a passcode for this connection (such as **123**), then select **OK**.
6. Follow the instructions shown on both phones.

---


## Use your phone offline

In places where you're not allowed to make or receive calls, you can still use your phone to play games or listen to music, if you switch the flight profile  on.

Switch the device off when mobile phone use is not allowed or when it may cause interference or danger, for example, in aircraft, near medical equipment, fuel, chemicals, or blasting areas.

1. Select **Menu > Settings > Profiles**.


2. Select **Flight > Activate**.

 **Warning:**  
When the flight profile is activated, you cannot make or receive any calls, including emergency calls, or use other features that require network coverage. To make a call, activate another profile.

## Indicators

 — You have unread messages.

 — You have unsent, cancelled, or failed messages.

 — The phone doesn't ring when somebody calls or sends a message.

 — An alarm is set.

**G / E** — The phone is connected to a GPRS or EGPRS network.

 /  — A GPRS or EGPRS connection is open.

 /  — The GPRS or EGPRS connection is on hold.

 — The phone is connected to a 3G (UMTS) network.

---


 /  — The phone is connected to a 3.5G (HSDPA) network.

 — Bluetooth is on.

 — All incoming calls are forwarded to another number.

 — The profile in use is timed. After a set amount of time, the phone changes back to the previously used profile.

 — A headset is connected to the phone.

 — The phone is connected to a device, such as a PC, with a USB cable.

---

## Phone basics



### Change the time and date

Select **Menu** > **Settings** and **Date and time**.

#### Change the time zone when travelling

1. Select **Date & time settings** > **Time zone**.
2. Select the time zone of your location.
3. Select **Save**.

The time and date are set according to the time zone. This makes sure your phone shows the correct sending time of received messages.


For example, GMT +8:00 is the time zone for Hong Kong (HK).



## Set an alarm

You can set an alarm to sound at a desired time.

On the home screen, select the clock.

 
1. Set the alarm time.
2. Select  to set the alarm.
3. To set the alarm to sound at the same time every day, select **Settings > Alarm repeat > On** and the days.



## Add an appointment

On the home screen, select the calendar.

1. Go to the date of the appointment, then select **Options > Make a note > Meeting**.
2. Fill in the fields, then select **Save**.

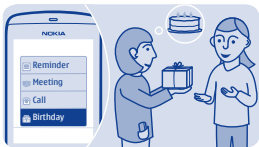

## Remember a birthday

Want to keep track of birthdays? Add them to your calendar.

1. Select **Menu > Applications > Calendar**.
2. Go to the date of the birthday, then select **Options > Make a note > Birthday**.
3. Fill in the fields, then select **Save**.



## Lunar calendar

Use the lunar calendar to check when traditional holidays take place, and to search for lunar festivals.

On the home screen, select the calendar.

### View lunar details for a day

Select **Options** > **Lunar calendar**.

### Search for a lunar festival

In the lunar day view, select **Lun. fest.**, type in the Gregorian year of the Spring festival, then select a lunar festival.

### Convert a solar item to a lunar date

In the lunar day view, select **Options** > **Solar item**.

### Convert between Gregorian and lunar dates

In the lunar day view, select **Options** > **Gregorian to lunar** or **Lunar to gregorian**.

Certain dates are shown in the calendar using different colours, such as red. This does not necessarily mean that the date is a public holiday in Hong Kong.





## Use the calculator

Stay within your budget wherever you are – your phone has a calculator.

1. Select **Menu > Applications > Calculator**.
2. Select **Options > Standard calculator** or **Scientific calculator**.
3. Type in your calculation, then select **=**.

**Tip:** You can also calculate interest rates and loan periods or instalments. Select **Options > Loan calculator**.



## Convert currencies

Quickly convert currencies, to keep track of local prices while travelling.

Select **Menu > Applications > Extras > Collection > Converter**.

### Set the exchange rate

 
1. Select **Options > Set exchange rates**.
2. Select a currency pair.
3. Type in the exchange rate for one of the currencies.

### Convert currency

1. Select **Select > Currency** and a currency pair.
2. Type in the amount for one currency. The converted value is shown automatically.

### Add additional currency pairs

1. Select **Options > New currency conv..**
2. Write the names of the two currencies, then select **OK**.
3. Type in the exchange rate for one of the currencies.

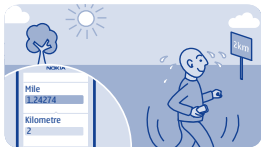

## Convert measures

You can convert measures on the go, such as kilometres to miles.

1. Select **Menu** > **Applications** > **Extras** > **Collection** > **Converter**.
2. Select **Select** and a conversion category.
3. Select conversion units.
4. Type in a value in one of the unit fields. The converted value is shown in the other unit field.



## Translate Chinese to English

You can look up the English translation of a Chinese word, and vice versa.

1. Select **Menu > Applications > Dictionary**.
2. In the input field, select the input mode, if needed.
3. Write the Chinese or English word.
4. To see the translation, select the word from the suggested words.

**Tip:** To look up synonyms or antonyms of an English word, select **Options > Synonyms** or **Antonyms**.



## Download a game or app

Download new games and apps directly to your phone.

**1. Select Menu > Applications and Extras > Options > Downloads.**

Your phone supports Java™ ME apps that have the .jad or .jar file extension. Make sure the app is compatible with your phone before downloading.

**2. Select Game downloads or App. downloads.** A list of available services is shown.

**3. Select a service, then follow the instructions shown on the phone.**



**Tip:** Download games and apps from Nokia Store. To learn more about Nokia Store, go to [www.nokia.com/support](http://www.nokia.com/support).

---

## Calls



### Make a call

1. On the home screen, type in the phone number. To delete a number, select **Clear**.
2. Press .
3. To end the call, press .

### Answer a call

Press .

### Decline a call

Press .



## View your missed calls

 
Did you miss a call, but want to see who called?

On the home screen, select **View**. The phone shows you the caller's name, if stored in the contacts list. To call back, press .

Missed and received calls are saved only if the network supports it, and your phone is switched on and within the network service area.



### View your missed calls later

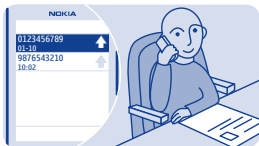Select **Menu** > **Contacts** > **Log** and **Missed calls**.



## Call the last dialled number

Did you try to call someone, but nobody picked up? It's easy to call again.

1. On the home screen, press .
2. Select the number, then press .




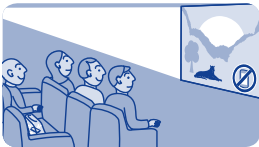 


## Call several people at the same time

Want to tell your great news to all your friends? With a conference call, you can easily call several people at the same time, saving you the trouble of calling each one separately. Conference call is a network service.

Check the network service availability from your network service provider.

1. Make the first call.
2. While in a call, select **Options > More > New call**.
3. Type in a phone number, or search for a contact.
4. Press . The first call is put on hold until you connect the conference call.
5. When you're able to talk to the second caller, select **Options > Conference**. You can add more calls to the conference.
6. To end the conference call, select **Options > End call**.



## Forward calls to your voicemail or another phone number

Your phone is ringing, but you can't answer? Let the call go to your voicemail, or forward it to another number. Call forwarding is a network service.

1. Select **Menu > Settings > Call > Call divert.**
2. Select when to forward the incoming voice calls:

**All voice calls** — Forward all calls.

**If busy** — Forward when busy.

**If not answered** — Forward when not answered.

**If out of reach** — Forward when the phone is switched off or out of network coverage for a certain length of time.

**If not available** — Forward when busy, when not answered, when the phone is switched off, or when out of network coverage.

3. Select **Activate > To voice mailbox** or **To other number**.

4. If **If not answered** or **If not available** is selected, set the length of time after which a call is forwarded.



## Prevent making or receiving calls

Keep your phone bill under control by preventing certain types of calls. You can prevent, for example, incoming calls while you're abroad. Call barring is a network service.

1. Select **Menu > Settings and Security**.
2. Select **Call barr. service** and an option.
3. Select **Activate**, then type in the barring password you have received from your service provider.

## **Contacts**



### **Save a name and phone number**

Add new contacts to your phone.


Select **Menu > Contacts** and **Add new**.

### **Add or edit contact details**

1. Select **Menu > Contacts** and **Names**, then select a contact. To search for a contact, select **Search**, then start writing the contact's name.

2. Select **Options > Add detail**.

**Tip:** To add a ringtone or photo for a contact, select the contact and **Options > Add detail > Multimedia**.

**Tip:** Want to call or message a contact straight from your home screen? Select the Favourite contacts bar, then select  and a contact that is saved on your phone. The contact is now shown on the home screen.



## Make calls quickly

Call someone often? Set their number as a speed dial.

Select **Menu > Contacts > Speed dials**.

### Assign a phone number to a number key

1. Select a number key. 1 is reserved for the voice mailbox.
2. Type in a number or search for a contact.

### Remove or change a phone number assigned to a number key

Select and hold the number key, then select **Delete** or **Change**.

### Make a call

On the home screen, press and hold a number key.

### Switch speed dialling off

Select **Menu > Settings** and **Call > Speed dialling > Off**.



## Create a contact group

If you add your family members or friends to a contact group, you can easily send a message to all of them at the same time.


1. Select **Menu > Contacts**.
2. Select **Groups > Add**.
3. Write a name for the group, optionally select a photo or ringtone, then select **Save**.
4. To add contacts to the group, select the group and **Add**.



## Move or copy contacts to your SIM card

Want to use your SIM card in another phone, but still have access to your contacts? By default, contacts are stored in the phone memory, but you can copy your contacts to a SIM card.

Select **Menu > Contacts**.

More contacts can be stored in the phone memory, and contacts saved on the SIM card can only have one phone number.  means a contact is stored on the SIM card.

### Copy all contacts

Select **Copy contacts > From phone to SIM**.

### Move all contacts

Select **Move contacts > From phone to SIM**.

**Tip:** If contacts are stored in both the phone memory and on the SIM card, there may be duplicate contacts in the contacts list. To show only contacts stored in the phone, select **Settings > Memory in use > Phone**.

---

## Personalisation




### Change your ringtone

You can personalise the ringtones and key and warning tones for each profile.

1. To select the profile for which you want to change the ringtone, select **Menu > Settings > Profiles** and the profile, then select **Activate**.
2. Select **Menu > Settings** and **Tones**.
3. Select **Ringing tone:** and the ringtone.

**Tip:** Download more ringtones from Nokia Store. To learn more about Nokia Store, go to [www.nokia.com/support](http://www.nokia.com/support).

### Change the volume of the keypad tones

1. Select **Menu > Settings** and **Tones**.
2. Select **Keypad tones:**, then use your finger to drag the volume bar .





## Add a shortcut to your home screen

Want to open your favourite apps straight from your home screen? Add shortcuts to your most used features.

1. Tap and hold the home screen, then select **Personalise view**.
2. Select a bar you want to personalise and an item, such as a widget, then select **Done**.

## Change a shortcut on the shortcut bar

 
1. Tap and hold the shortcut you want to change, then select **Change shortcut**.

To change all the shortcuts at the same time, select **Select shortcuts**.

2. Select an item, such as a widget.

**Tip:** You can also add shortcuts to the Go to menu. On the home screen, select **Go to** > **Personalise view**.

**Tip:** Try tapping different areas on your home screen. You can, for example, change the date and time, set alarms, or add to your calendar also from your home screen.

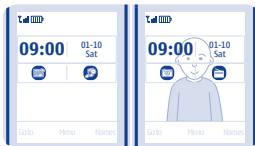

## Personalise your home screen

Want to see a favourite landscape or family photos on your home screen? Personalise the home screen to your liking.

### Change the wallpaper

1. Select **Menu > Settings** and **Display > Wallpaper**.

2. Select a folder and a photo.

**Tip:** You can also take a photo on your phone, and use that.

**Tip:** Download more wallpapers from Nokia Store. For more info, go to [www.nokia.com/support](http://www.nokia.com/support).

### Rearrange home screen items

Replace shortcuts with new ones.



 
## Create your own profile

When in a meeting or at a public event, you may want to use a different ringtone volume. You can create new profiles for different situations.

1. Select **Menu > Settings > Profiles**.
2. Select **My style 1** or **My style 2**.
3. Select **Personalise**, then select a suitable ringtone and volume level.
4. Write a name for the profile, then select **OK > Save**.

---

## Messaging

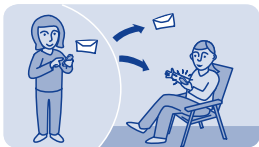

### Send a message

Keep in touch with your family and friends through messages. You can send your photos and videos in your messages.

1. Select **Menu > Messaging** and **Create message**.
2. To include a photo or video, select **Options > Insert object**.
3. Write your message, then select **Continue**.
4. To add a recipient, select **Contacts**. To type in a phone number or mail address, select **Number or mail**.
5. Select **Send**.

**Tip:** You can also press the messaging key to start writing a message.

**Tip:** To type in a special character or a smiley, select **Options > Insert symbol**.

Sending a message with an attachment may be more expensive than sending a normal text message. For more info, contact your network service provider.

See ➡ 10, 11, 12.



## Send a message to a group of people

Would you like to send the same message to all your family members? Create a contact group of them in your phone, and you can send the message to all of them at the same time.

1. Select **Menu > Messaging**.
2. Select **Create message**.
3. Write your message, then select **Continue**.
4. To select a group, select **Contact groups**.
5. Select **Send**.

---

## Write text

1. To type in the first letter or character, press a number key (2-9) repeatedly until it's shown.
2. Type in the next letter or character. If it's on the same key, wait until the cursor is shown, or select ►.

The available characters depend on the selected writing language.

### Move the cursor

Select ◀ or ▶, or tap where you want to put the cursor.

### Type in a space

Press 0.

### Type in a punctuation mark

Press 1 repeatedly.

### Type in a special character

Select ?!£ and the character.



## Save an attachment

Did someone send you a great photo? Save it to your phone. You can also save other types of attachments.

Select **Menu > Messaging**.

### Save a message attachment

1. Open the message.
2. Select **Options > Save contents**. If there's more than one attachment, select the file.
3. Select **Options > Save**.
4. Select a folder to save in, such as **Images**, and write a name for the file.

### Save a mail attachment

1. Open the mail.
2. Select the attachment. Your phone may ask you to download the file.
3. Select **Save**.

Pictures and videos are saved in Gallery.



## Check your voicemail

Did you let your calls go to voicemail when you couldn't answer? Listen to the messages people have left you at a convenient time.

### Set up your voicemail

To use voicemail, you may need to subscribe to the service. For more info on this network service, contact your network service provider.

Before using your voice mailbox, get your voice mailbox number from your network service provider. Check your order confirmation or your network service provider's support website.

1. Select **Menu > Messaging > Voice messages** and **Voice mailbox no..**
2. Type in your voice mailbox number, then select **OK**.

### Listen to your voicemail when you just missed a call

1. Select the notification of a new message on the home screen.
2. Select **Options > Call sender**.

### Listen to your voicemail later

Press and hold **1** on the home screen.





## Send an audio message

Don't have time to write a text message? Record and send an audio message instead.

1. Select **Menu > Messaging**.
2. Select **Other messages > Audio message**.
3. To record your message, select ●.
4. To stop recording, select ■.
5. Select **Continue** and a contact.
6. Select **Send**.

## ✉ Mail and chat



### Set up your mail account

Do you use more than one mail address? You can have several mailboxes in your phone.

Select **Menu > Messaging > Set up mail**.

 
1. Select your mail service provider.
2. Type in your username and password.

**Tip:** If you don't want to type in your password every time you use your mail account, select **Save password**.

3. Select **Sign in**.

### Add a mailbox later

1. Select **Menu > Messaging > Mail**.
2. Select **Add account**, then follow the instructions shown on the phone.

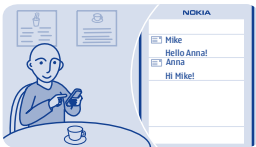

## Send a mail

Would you like to send a mail while on the go? With your phone, you can read and send mail, even when not sitting at your desk.

1. Select **Menu > Messaging > Mail** and a mail account.
2. Select **Options > Compose new**.
3. To add the recipient's mail address, select **Add**, or manually write the address.
4. Write the subject and your message.
5. To attach a file, such as a photo, select **Options > Attach > From Gallery**.
6. Select **Send**.



## Chat with your friends

Do you like chatting online with your friends? If you are out, you can send instant messages with your phone no matter where you are.

1. Select **Menu > Messaging > Chat**.
2. If several chat services are available, select the service you want.
3. Sign in to the service.

**Tip:** You can sign in to and chat in several services at the same time. You must separately sign in to each service.

4. In your contacts list, select the contact you want to chat with.
5. Write your message in the text box at the bottom of the screen.
6. Select **Send**.

You can have several conversations going on at the same time.


See ➡ 9.

---

## Photos and videos



### Take a photo

1. To open the camera, select **Menu > Photos > Camera**.
2. To zoom in or out, use the volume keys.
3. Select .



The photos are saved in **Menu > Photos > My photos**.



## Record a video

Besides taking photos with your phone, you can also capture your special moments as videos.

To open the camera, select **Menu > Photos > Camera** and  **> Video camera**.



1. To start recording, select .
2. To zoom in or out, use the volume keys.
3. To stop recording, select .

Videos are saved in **Menu > Photos > My videos**.



## Organise your photos


To make it easier to find a particular photo, organise your photos into albums.

1. Select **Menu > Photos** and **My albums**.
2. Select  > **Create album**, then write a name for the album.
3. Select the photos to add to the album, then select .



## Edit a photo

Is the photo you took too dark or not ideally framed? With your phone, you can easily do simple edits to the photos you have taken.

1. Select **Menu > Photos**.
2. Select a photo in My photos, Timeline, or My albums.
3. Select  and an effect.





## Send a photo or video

Send your photos and videos to your family and friends in a multimedia message, mail, or using Bluetooth.

Select **Menu > Photos**.

1. Select the folder where the photo or video is.
2. Select and hold the photo or video, then select **Send** and how you want to send it.

## Send several photos at the same time

1. Select the folder where the photos are.
2. Select **≡ > Mark**, then mark what you want to send.
3. Select **≡ > Send marked** and how you want to send them.

## Send several videos at the same time

1. Select the folder containing the videos.
2. Select **Options > Mark**, then mark what you want to send.
3. Select **Options > Send marked** and how you want to send them.

---

## 🎵 Music and audio



### Copy music from your PC

Do you have music on your PC that you want to listen on your phone? Use Nokia Suite and a USB cable to manage and sync your music collection.

1. Connect your phone to your computer with a compatible USB cable. Make sure a compatible memory card is in your phone.
2. Select **Media transfer** as the connection mode.
3. On your computer, open Nokia Suite. For more info, see the Nokia Suite help.

Some music files can be protected by digital rights management (DRM) and cannot be played on more than one phone.



## Play a song

You can use your phone's music player to listen to music and podcasts while on the move.

Select **Menu > Music > My music**.

1. Select a song.
2. To pause or resume playing, select **||** or **▶**.

## Skip to the previous or next song

Select **◀◀** or **▶▶**.

## Close the music player

Press the end key.



## Connect loudspeakers to your phone

Take the party with you – listen to the music on your phone through compatible loudspeakers (available separately). If the loudspeakers have Bluetooth, you can stream the music wirelessly.

### Connect wired loudspeakers

Connect the loudspeakers to the 3.5 mm headset connector in your phone.

### Connect Bluetooth loudspeakers

1. Select **Menu > Settings > Connectivity > Bluetooth** and **On**.
2. Switch the loudspeakers on.
3. To pair your phone and the loudspeakers, select **Conn. to audio acc..**
4. Select the loudspeakers.
5. You may need to type in a passcode. For details, see the user guide for the loudspeakers.

See ➡ 2.



## Listen to the radio

Connect a compatible headset to your phone. The headset acts as an antenna.

Select **Menu > Music > Radio**.

### Change the volume

Use the volume keys.

### Set the radio to play in the background

Press the end key.

### Close the radio

Press and hold the end key.

**Tip:** To close the radio when it is playing in the background, press and hold the end key



## Record sound clips

You can record sounds from nature, such as birds singing, as well as voice memos or phone conversations.

Select **Menu > Applications > Voice recorder**.

1. Select ●.
2. To stop recording, select ■

## Record a phone conversation

During a call, select **Options > More > Record**.

Both parties hear a tone at regular intervals during the recording.

## Listen to your recordings

Select **Options > Recordings list**.



# Web



## Browse the web

Catch up on the news, and visit your favourite websites on the go.

Select **Menu > Internet**.

### Go to a website

Select **Go to address**, then write the address.

The XHTML browser in this phone supports the Unicode encoding format.

---

## Clear browsing history

Select **Menu > Internet**.

A cache is a memory location that is used to store data temporarily. If you have, or have tried to, access confidential info or a secure service, requiring passwords, clear the cache after each use.

### Clear the cache or cookies

While browsing a website, select **Options > Tools > Clear the cache** or **Clear cookies**.

### Prevent cookies from being stored

Select **Options > Settings > Security > Cookies > Reject**.



## ⌘ Connectivity



### Connect to a wireless headset

Want to keep working at your computer during a call? Use a wireless headset. You can also answer a call, even if your phone's not directly at hand.

Select **Menu > Settings > Connectivity > Bluetooth**.

1. Select **Bluetooth > On**.
2. Switch the headset on.
3. On your phone, select **Conn. to audio acc..**
4. Select the headset.
5. You may need to type in a passcode (such as 1234).

See ➡ 6.



## Protect your phone

Do you want to control who can find and connect to your phone when Bluetooth is on?

Select **Menu** > **Settings** > **Connectivity** > **Bluetooth**.

### Prevent others from finding your phone

Select **Phone visibility** > **Hidden**.

When your phone is hidden, others can't find it. However, paired devices can still connect to your phone.

### Switch Bluetooth off

Select **Bluetooth** > **Off**.

Do not pair with or accept connection requests from an unknown device. This helps protect your phone from harmful content.



## Copy content between your phone and a computer

You can use a USB cable to copy your photos and other content between your phone and a compatible computer.

1. Connect your phone to a computer with a compatible USB cable.
2. Select a mode:

**Nokia Suite** — Nokia Suite is installed on your computer.

**Media transfer** — Nokia Suite is not installed on your computer. If you want to connect to a home entertainment system or printer, use this mode.

 
**Mass storage** — Nokia Suite is not installed on your computer. The phone is displayed as a portable device on your computer. Make sure a memory card is in your phone. If you want to connect to other devices, such as a home or car stereo, use this mode.

3. To copy the content, use the file manager of the computer.

To copy your contacts, music files, videos, or photos, use Nokia Suite.

---

## Protect your phone

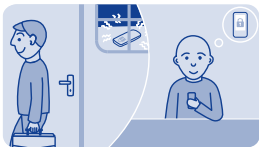

### Lock your phone

Want to stop others using your phone? Create a security code, and set your phone to lock itself automatically when you're not using it.

Select **Menu** > **Settings**.

#### Set the phone to lock the keys and screen

Select **Phone** > **Security keyguard** > **On**.

You need the security code to unlock the phone.

#### Set a personalised security code

1. Select **Security** > **Access codes** > **Change security code**.

2. Type in the preset security code **12345**.

3. Type in a new code. You can only use numbers, and at least 5 numbers are needed.

Keep the security code secret and in a safe place separate from your phone. If you forget the security code and your phone is locked, your phone will require service. Additional charges may apply, and all the personal data in your phone may be deleted.



## Password protect your memory card

Want to protect your memory card against unauthorised use? You can set a password to protect the content.

1. Select **Menu > Applications > Gallery**.
2. Select and hold the memory card, then select **Mem. card opt..**
3. Select **Set password**, then type in a password.

Keep the password secret and in a safe place, separate from the memory card.

---

## Format a memory card

Want to delete all content from your memory card? When you format a memory card, all the data on it is deleted.

1. Select **Menu > Applications > Gallery**.
2. Select and hold the memory card, then select **Mem. card opt..**
3. Select **Format m. card**.



## Prepare your phone for recycling

If you buy a new phone, or otherwise want to dispose of your phone, Nokia recommends that you recycle your phone. Beforehand, remove all personal info and content from your phone.

### **Remove all content and restore settings to the original values**

1. Back up the content you want to keep to a compatible memory card or to a compatible computer.
2. End all calls and connections.
3. Select **Menu > Settings and Rest. fact. sett. > All**.
4. Type in the security code.
5. Your phone switches off and then on again. Check carefully that all your personal content, such as contacts, photos, music, videos, notes, messages, mails, presentations, games, and other installed apps have been removed.

---

## ? Support and updates



### Support

 
When you want to learn more about how to use your phone, or if you're unsure how your phone should work, read the user guide thoroughly.

If you have an issue, do the following:

- Reboot your phone. Switch the phone off, then remove the battery. After about a minute, put the battery back in, then switch the phone on again.
- Update your phone software
- Restore the original factory settings

If your issue remains unsolved, contact Nokia for repair options. Go to **[www.nokia.com.hk/repair](http://www.nokia.com.hk/repair)**. Before sending your phone for repair, always back up your data, as all personal data in your phone may be deleted.



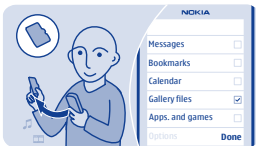

## Back up content to a memory card

Want to make sure you won't lose any important files? You can back up your phone memory to a compatible memory card.

Select **Menu > Settings > Sync & backup**.

1. Select **Create backup**.
2. Select what you want to back up, then select **Done**.

### Restore a backup


Select **Restore backup**.

---

## About phone software updates

Stay in step with the beat – update your phone software to get new and enhanced features for your phone. Updating the software may also improve your phone performance.

 
It is recommended that you back up your personal data before updating your phone software.

 **Warning:**  
If you install a software update, you cannot use the device, even to make emergency calls, until the installation is completed and the device is restarted.

Using services or downloading content may cause transfer of large amounts of data, which may result in data traffic costs.

Before starting the update, connect a charger or make sure the device battery has enough power.

After the update, the instructions in the user guide may no longer be up to date. You may find the updated user guide at [\*\*www.nokia.com/support\*\*](http://www.nokia.com/support).

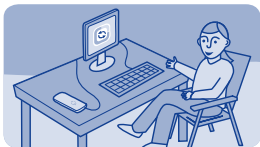

## Update phone software using your PC

Update your phone software with the Nokia Suite PC app. You can also back up the pictures and other stuff in your phone to your computer.

You need a compatible PC, a high-speed internet connection, and a compatible USB cable to connect your phone to the PC.

To get more info and to download the app, go to **[www.nokia.com/support](http://www.nokia.com/support)**.



## Update phone software using your phone

You can update your phone software wirelessly. You can also set your phone to automatically check for updates.

Select **Menu > Settings and Phone > Phone updates**.

1. To check if there is an update, select **Downl. ph. sw**.
2. To download and install an update, select **Downl. ph. sw**, then follow the instructions shown on the phone.

The update may take several minutes. If you encounter problems, contact your network service provider.

### Check for updates automatically

Select **Auto sw update**, then set how often to check.

Your network service provider may send updates over the air directly to your phone. For more info on this network service, contact your network service provider.



## Restore original settings

If your phone is not working properly, you can reset some settings to their original values.

1. End all calls and connections.
2. Select **Menu > Settings** and **Rest. fact. sett. > Settings only**.
3. Type in the security code.

After restoring the original settings, your phone switches off and then on again. This may take longer than usual.

---

## Access codes

<p>PIN or PIN2 code (4-8 digits)</p>	<p>These protect your SIM against unauthorised use or are required to access some features.</p> <p>You can set your phone to ask for the PIN code when you switch it on.</p> <p>If not supplied with your card or you forget the codes, contact your service provider.</p> <p>If you type in the code incorrectly three times in a row, you need to unblock the code with the PUK or PUK2 code.</p>
<p>PUK or PUK2 code (8 digits)</p>	<p>These are required to unblock a PIN or PIN2 code.</p> <p>If not supplied with your SIM, contact your service provider.</p>
<p>IMEI number (15 digits)</p>	<p>This is used to identify valid phones in the network. You may also need to give the number to Nokia Care services.</p> <p>To view your IMEI number, dial <b>*#06#</b>.</p>
<p>Lock code (security code) (min. 5 digits)</p>	<p>This helps you protect your phone against unauthorised use.</p> <p>You can set your phone to ask for the lock code that you define. The default lock code is 12345.</p> <p>Keep the code secret and in a safe place, separate from your phone.</p>

---

	<p>If you forget the code and your phone is locked, your phone will require service. Additional charges may apply, and all the personal data in your phone may be deleted.</p>
--	--

---

# Nokia original accessories

## Practical rules about accessories

- Keep all accessories out of the reach of small children.
- When you disconnect the power cord of any accessory, grasp and pull the plug, not the cord.
- Check regularly that accessories installed in a vehicle are mounted and are operating properly.
- Installation of any complex car accessories must be made by qualified personnel only.

## Battery

Type: BL-4U

Talk time:

Up to 4.3 hours (WCDMA) / 6.9 hours (GSM).

Standby:

Up to 597 hours (WCDMA) / 550 hours (GSM).

### Important:

Battery talk and stand-by times are estimates and only possible under optimal network conditions. Actual battery talk and standby times depend on SIM cards, features used, battery age and condition, temperatures to which battery is exposed, network conditions, and many other factors, and may be significantly shorter than those specified above. Ringing tones, hands free call handling, use in digital mode, and other features will also consume the battery, and the amount of time a device is used for calls will affect its stand-by time. Likewise, the amount of time that the device is turned on and in the standby mode will affect its talk time.



## Product and safety information

### Safety

Read these simple guidelines. Not following them may be dangerous or illegal. For further info, read the complete user guide.



#### **SWITCH OFF IN RESTRICTED AREAS**

Switch the device off when mobile phone use is not allowed or when it may cause interference or danger, for example, in aircraft, in hospitals or near medical equipment, fuel, chemicals, or blasting areas. Obey all instructions in restricted areas.



#### **ROAD SAFETY COMES FIRST**

Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.



#### **INTERFERENCE**

All wireless devices may be susceptible to interference, which could affect performance.



#### **QUALIFIED SERVICE**

Only qualified personnel may install or repair this product.



#### **KEEP YOUR DEVICE DRY**

Your device is not water-resistant. Keep it dry.



#### **PROTECT YOUR HEARING**

To prevent possible hearing damage, do not listen at high volume levels for long periods. Exercise caution when holding your device near your ear while the loudspeaker is in use.

### Feature specific instructions

➡ 1 **Important:** Use only a stylus approved by Nokia for use with this device. Using any other stylus may invalidate any warranty applying to the device and may damage the touch screen. Avoid scratching the touch screen. Never use an actual pen, pencil, or other sharp object on the touch screen.

➡ 2 Do not connect products that create an output signal, as this may damage the device. Do not connect any voltage source to the Nokia AV connector. If you connect an external device or headset, other than those approved by Nokia for use with this device, to the Nokia AV connector, pay special attention to volume levels.

---

➡ 3 You can use USB charging when a wall outlet is not available. Data can be transferred while charging the device. The efficiency of USB charging power varies significantly, and it may take a long time for charging to start and the device to start functioning.

➡ 4 Use only compatible memory cards approved by Nokia for use with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card.

➡ 5 **!** **Important:** This device is designed to be used with a standard SIM card (see figure) only. Use of incompatible SIM cards may damage the card or the device, and may corrupt data stored on the card. Please consult your mobile operator for the use of a SIM card that has a mini-UICC cutout.



Missed and received calls are logged only if supported by the network, and the phone is switched on and within the network service area.

Your device may have internal and external antennas. Avoid touching the

antenna area unnecessarily while the antenna is transmitting or receiving. Contact with antennas affects the communication quality and may cause a higher power level during operation and may reduce the battery life.

Use only compatible memory cards approved by Nokia for use with this device. Incompatible cards may damage the card and the device and corrupt data stored on the card.

Your device supports microSD cards with a capacity of up to 32 GB.



**!** **Important:** Do not remove the memory card when an application is using it. Doing so may damage the memory card and the device, and corrupt data stored on the card.

The antenna area is highlighted.

To listen to the radio, you need to attach a compatible headset to the device. The headset acts as an antenna.

Picture messages may look different in different devices.

---

➡ 6 There may be restrictions on the use of Bluetooth technology in some countries. For example, in France, you are only allowed to use Bluetooth technology indoors. For more information, contact your local authorities.

Sending a message with an attachment may be more expensive than sending a normal text message. For more information, contact your service provider.

This service is not available in all countries or regions.

➡ 7 If the battery has not been used for a long time, to begin charging, you may need to connect the charger, then unplug and reconnect it.

➡ 8 If the battery is completely discharged, it may take several minutes before the charging indicator is displayed or before any calls can be made.

Operating the device in hidden mode is a safer way to avoid malicious software. Do not accept Bluetooth connection requests from sources you do not trust. You can also switch the Bluetooth function off when you are not using it.

**Note:** The XHTML browser in this device supports the Unicode encoding format.

➡ 9 Using services or downloading content may cause transfer of large amounts of data, which may result in data traffic costs.

➡ 10 You can send text messages that are longer than the character limit for a single message. Longer messages are sent as two or more messages. Your service provider may charge accordingly.

Characters with accents, other marks, or some language options, take more space, limiting the number of characters that can be sent in a single message.

➡ 11 If the item you insert in a multimedia message is too large for the network, the device may automatically reduce the size.

➡ 12 Only compatible devices can receive and show multimedia messages. Messages may look different in different devices.

## **Network services and costs**

Your device is approved for use on the GSM 850/900/1800/1900 MHz

---

networks and WCDMA 850/900/1900/2100 MHz networks. To use the device, you need a subscription with a service provider.

Using network services and downloading content to your device requires a network connection and may result in data traffic costs. Some product features require support from the network, and you may need to subscribe to them.

## Connectivity security

Nokia understands how important it is that your mobile phone or device operates reliably and that your personal content is saved safely.

Any information from an unknown or unreliable source, for example, via Bluetooth connectivity, multimedia message, or cable, may harm your PC, mobile phone, or device. You may protect your mobile phone or device from damage and keep it secured by following simple measures:

- Always keep Bluetooth connectivity closed unless you want your phone or device to be visible to others, when your phone or device supports Bluetooth.
- Always be alert when receiving information, like Bluetooth file or multimedia message, from an unknown or untrustworthy source.
- Do not download or install any applications that may include software harmful to your phone or device.
- Always download and install applications or content, like ringing tone or game, from trusted or well-known sources, such as Nokia Store, where good protection is provided against viruses and other harmful software.

This is a friendly reminder, the mentioned function may vary from different device model.

## Battery Battery and charger info

Your device is intended for use with a BL-4U rechargeable battery. Nokia may make additional battery models available for this device. Always use original Nokia batteries.

This device is intended for use when supplied with power from the following chargers: AC-11. The exact Nokia charger model number may

---

vary depending on the plug type, identified by E, X, AR, U, A, C, K, B, or N. The charger model number can be, for example, AC-11.

The battery can be charged and discharged hundreds of times, but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery.

**!** **Important:** Talk and standby times are estimates only. Actual times are affected by, for example, network conditions, device settings, features being used, battery condition, and temperature.

### **Battery safety**

Always switch the device off and unplug the charger before removing the battery. When you unplug a charger or an accessory, hold and pull the plug, not the cord.

When your charger is not in use, unplug it from the electrical plug and the device. Do not leave a fully charged battery connected to a charger, as overcharging may shorten the battery's lifetime. If left unused, a fully charged battery will lose its charge over time.

Always keep the battery between 15°C and 25°C (59°F and 77°F). Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily.

Accidental short-circuiting can happen when a metallic object touches the metal strips on the battery, for example, if you carry a spare battery in your pocket. Short-circuiting may damage the battery or the connecting object.

Do not dispose of batteries in a fire as they may explode. Dispose of batteries according to local regulations. Recycle when possible. Do not dispose as household waste.

Do not dismantle, cut, open, crush, bend, puncture, or shred cells or batteries. If a battery leaks, do not let battery liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, or seek medical help.

Do not modify, remanufacture, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged.

---

Use the battery and charger for their intended purposes only. Improper use, or use of unapproved batteries or incompatible chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the battery or charger is damaged, take it to a service centre for inspection before continuing to use it. Never use a damaged battery or charger. Only use the charger indoors.

### **Take care of your device**

Handle your device, battery, charger and accessories with care. The following suggestions help you protect your warranty coverage.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that corrode electronic circuits. If your device gets wet, remove the battery, and allow the device to dry.
- Do not use or store the device in dusty or dirty areas. Moving parts and electronic components can be damaged.
- Do not store the device in high temperatures. High temperatures can shorten the life of the device, damage the battery, and warp or melt plastics.
- Do not store the device in cold temperatures. When the device warms to its normal temperature, moisture can form inside the device and damage electronic circuits.
- Do not attempt to open the device other than as instructed in the user guide.
- Unauthorised modifications may damage the device and violate regulations governing radio devices.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and mechanics.
- Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not paint the device. Paint can clog moving parts and prevent proper operation.
- Switch off the device and remove the battery from time to time for optimum performance.

- 
- Keep your device away from magnets or magnetic fields.
  - To keep your important data safe, store it in at least two separate places, such as your device, memory card, or computer, or write down important info.

During extended operation, the device may feel warm. In most cases, this is normal. If you suspect the device is not working properly, take it to the nearest authorised service facility.

## **Recycle**

Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help prevent uncontrolled waste disposal and promote the recycling of materials. Check how to recycle your Nokia products at [www.nokia.com/recycling](http://www.nokia.com/recycling).

## **About Digital Rights Management**

When using this device, obey all laws and respect local customs, privacy and legitimate rights of others, including copyrights. Copyright protection may prevent you from

copying, modifying, or transferring pictures, music, and other content.

Content owners may use different types of digital rights management (DRM) technologies to protect their intellectual property, including copyrights. This device uses various types of DRM software to access DRM-protected content. With this device you can access content protected with WMDRM 10, OMA DRM 1.0, OMA DRM 1.0 forward lock, and OMA DRM 2.0. If certain DRM software fails to protect the content, content owners may ask that such DRM software's ability to access new DRM-protected content be revoked. Revocation may also prevent renewal of such DRM-protected content already in your device. Revocation of such DRM software does not affect the use of content protected with other types of DRM or the use of non-DRM-protected content.

Digital rights management (DRM) protected content comes with an associated licence that defines your rights to use the content.


If your device has WMDRM-protected content, both the licences and the content are lost if the device memory is formatted. You may also lose the

---

licences and the content if the files on your device become corrupted. Losing the licences or the content may limit your ability to use the same content on your device again. For more information, contact your service provider.

### **Additional safety information**

#### **Nickel**

 **Note:** The surface of this device does not contain nickel in the platings. The surface of this device contains stainless steel.

#### **Small children**

Your device and its accessories are not toys. They may contain small parts. Keep them out of the reach of small children.

#### **Operating environment**

This device meets radio frequency exposure guidelines in the normal use position at the ear or at least 1.5 centimetres (5/8 inch) away from the body. Any carry case, belt clip, or holder for body-worn operation should not contain metal and should position the device the above-stated distance from your body.

To send data files or messages requires a quality connection to the network. Data files or messages may

be delayed until such a connection is available. Follow the separation distance instructions until the transmission is completed.

#### **Medical devices**

Operation of radio transmitting equipment, including wireless phones, may interfere with the function of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine whether they are adequately shielded from external radio frequency energy.

#### **Implanted medical devices**

Manufacturers of medical devices recommend a minimum separation of 15.3 centimetres (6 inches) between a wireless device and an implanted medical device, such as a pacemaker or implanted cardioverter defibrillator, to avoid potential interference with the medical device. Persons who have such devices should:

- Always keep the wireless device more than 15.3 centimetres (6 inches) from the medical device.
- Not carry the wireless device in a breast pocket.



- 
- Hold the wireless device to the ear opposite the medical device.
  - Turn the wireless device off if there is any reason to suspect that interference is taking place.
  - Follow the manufacturer directions for the implanted medical device.

If you have any questions about using your wireless device with an implanted medical device, consult your health care provider.

## Hearing

**⚠ Warning:** When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety.

Some wireless devices may interfere with some hearing aids.

## Vehicles

Radio signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection, electronic antilock braking, electronic speed control, and air bag systems. For more info, check with the

manufacturer of your vehicle or its equipment.

Only qualified personnel should install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate your warranty. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories. Remember that air bags inflate with great force. Do not place your device or accessories in the air bag deployment area.

## Potentially explosive environments

Switch your device off in any area with a potentially explosive atmosphere, for example near petrol pumps at service stations. Sparks in such areas could cause an explosion or fire resulting in bodily injury or death. Observe restrictions in fuel service stations, storage, and distribution areas; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include areas

---


where you would be advised to switch your vehicle engine off, below deck on boats, chemical transfer or storage facilities, and where the air contains chemicals or particles such as grain, dust, or metal powders. You should check with the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) to determine if this device can be safely used in their vicinity.

## **Make an emergency call**

- 1 Make sure the device is switched on.
- 2 Check for adequate signal strength. You may also need to do the following:
  - Put a SIM card in the device.
  - Switch the call restrictions off in your device, such as call barring, fixed dialling, or closed user group.
  - Make sure the flight profile is not activated.
  - If the device screen and keys are locked, unlock them.
- 3 Press the end key repeatedly, until the home screen is shown.
- 4 Type in the official emergency number for your present

location. Emergency call numbers vary by location.

- 5 Press the call key.
- 6 Give the necessary info as accurately as possible. Do not end the call until given permission to do so.

 **Important:** Activate both cellular and internet calls, if your device supports internet calls. The device may attempt to make emergency calls both through cellular networks and through your internet call service provider. Connections in all conditions cannot be guaranteed. Never rely solely on any wireless device for essential communications like medical emergencies.

## **Protect your device from harmful content**

Your device may be exposed to viruses and other harmful content. Take the following precautions:

- Be cautious when opening messages. They may contain malicious software or otherwise be harmful to your device or computer.
- Be cautious when accepting connectivity requests, browsing

---

the internet, or downloading content. Do not accept Bluetooth connections from sources you do not trust.

- Only install and use services and software from sources that you trust and that offer adequate security and protection.
- Install antivirus and other security software on your device and any connected computer. Only use one antivirus app at a time. Using more may affect performance and operation of the device and/or computer.
- If you access preinstalled bookmarks and links to third party internet sites, take the appropriate precautions. Nokia does not endorse or assume liability for such sites.

### **Certification information (SAR)** **This mobile device meets guidelines for exposure to radio waves.**

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were

developed by the independent scientific organisation ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is 2.0 watts/kilogram (W/kg) averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station.

The highest SAR value under the ICNIRP guidelines for use of the device at the ear is 1.51 W/kg.

Use of device accessories may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band. Additional SAR information may be provided under

---

product information at  
[www.nokia.com](http://www.nokia.com).

## **NOKIA SERVICE TERMS**

### **Terms of Use**

#### **1. Acceptance**

These Nokia Service Terms together with the Privacy Policy and all other additional terms and information that may be provided within the Service (collectively "Terms") govern your use of the service, site, content and software (collectively the "Service"). By registering for or using the Service or any portion of it you accept the Terms.

The Terms constitute an agreement between you and Nokia Corporation, Keilalahdentie 2-4, 02150 Espoo, Finland including its affiliates and suppliers (collectively "Nokia"), defining your and Nokia's rights and responsibilities with respect to the Service.

#### **2. Eligibility**

To use the Service, you must be at least thirteen (13) years of age. If you are under thirteen (13) years of age, or at least thirteen (13) years of age but a minor where you live, you must have your parent or legal guardian accept your registration on your

behalf and approve your use of the Service. Anyone completing the registration must be legally competent.

#### **3. Registration and Termination**

To use a Service you may need to register and create a Nokia account with username and a password. You may need to provide us with certain personal and other information. Nokia may verify your email address before account can be used. Upon first use of your device and each time you update the Nokia device software, a text message will be sent to Nokia. The creation of a Nokia Account will require data transmission. Data transmission costs may apply.

You agree to provide truthful and complete information when you register for the Service and to keep that information updated. You must take due care to protect your username and password against misuse by others and promptly notify Nokia about any misuse. You, and your parent or legal guardian if you are a minor, are personally responsible for any use of the Service.

You may terminate your registration if you no longer wish to use the Service.

---

After termination, you will no longer have access to the Service. Nokia may terminate your registration or restrict your access to certain parts of the Service if Nokia reasonably believes that you have breached the Terms or with prior notice if you have not signed into the Service with your username in the past six (6) months.

Except as set forth in the Privacy Policy, Nokia is not responsible for any removal or loss of the information or content you have submitted to the Service. When information or content is removed from the Service by either you or Nokia, traces or copies may still remain elsewhere.

#### **4. Licenses**

Nokia grants you a non-exclusive, non-transferable license, revocable at any time at Nokia's sole discretion, to access and use the Service strictly in accordance with the Terms. Use of the Service does not grant you any intellectual property rights in or to any information or content in the Service.

As part of the Service, Nokia may provide you with content developed by Nokia or its licensors ("Content"). Nokia grants you a non-exclusive and perpetual license to use Content for

the purpose it is intended, unless otherwise defined in the applicable Terms or the purchase order. Some Content may only be available to residents of certain geographical areas. You are bound by any restrictions applicable to specific Content you obtain through the Service. Any license acquired to third-party Content is a binding agreement between you and the third-party Content provider. You have only the rights to the Content which are expressly granted here.

As part of the Service, Nokia may provide you with certain software developed by Nokia or, its licensors ("Software"). Your use of Software may be subject to separate terms and conditions that you must accept before using the Software. If there are no separate terms and conditions applicable to such Software, the following terms apply: Nokia grants to you a limited, non-exclusive, non-transferable right to install and use the Software on your computer and/or mobile device. You may not copy the Software, except to make a single archival backup copy. You may not distribute, transfer the right to use, modify, translate, reproduce, resell, sublicense, rent, lease, reverse

---

engineer, or otherwise attempt to discover the source code of or make derivative works of the Software. For open source licensed software, applicable open source license terms apply.

The Software maybe subject to export controls under the U.S. Export Administration Regulations and other import or export control regulations. You agree to strictly comply with all applicable import and export regulations and acknowledge that you have the responsibility to obtain licenses to export, re-export, transfer, or import such Software.

You may be able to submit information or content (“Material”) to the Service. Nokia does not claim ownership in your Material. Your submission of Material does not transfer ownership of rights of the Material to Nokia. Nokia is only transmitting the Material and is not responsible for editorial control over it. By submitting Material to the Service you grant Nokia a worldwide, non-exclusive, sub-licensable, assignable, fully paid-up, royalty-free, perpetual and irrevocable license to use, copy, publicly perform, display, distribute in any media and

modify the Material to incorporate the Material into other works, and to grant similar sublicenses to the extent necessary for Nokia to provide the Service. You may be able to adjust this grant in the privacy and other settings of the Service.

You are solely responsible for taking backup copies of the data you store on the Service, including Content you upload. If the Service is discontinued or canceled, Nokia may permanently delete your data. Nokia has no obligation to return data to you after the Service is discontinued or canceled.

## **5. Using the Service**

You agree to:

- Comply with applicable laws, the Terms and good manners;
- Use the Service only for your personal, non-commercial purposes;
- Not submit unlawful, offensive, inaccurate, misleading, abusive, pornographic, harassing, libelous or otherwise inappropriate Material;
- Obtain any consents, permission or licenses that may

---

be legally required for you to submit any Material;

- Respect the privacy of others;
- Not distribute or post spam, unreasonably large files, chain letters, pyramid schemes, viruses; or
- Not use any other technologies or initiate other activities that may harm the Service, or the interest or property of the Service users.
- Not to use any automated systems or means to access, acquire, copy or monitor any part of the service.
- Be responsible for the consequences related to the Material that you post.

Nokia may but has no obligation to:

- Monitor or moderate any Content or Material;
- Remove any Material from the Service; and
- Restrict access to any part of the Service at any time in its sole discretion.

## 6. Content

Before downloading or accessing any Content, please check whether the Content which you wish to access is restricted by age or marked as potentially 'offensive' or 'explicit'. Nokia shall not be responsible for any claims or offense caused or suffered by you accessing such Content.

You agree:

- To use the Content only for your personal, non-commercial purposes;
- To use the Content in accordance with the restrictions set out in the applicable laws, additional terms, guidelines and policies or on the product pages that apply to that particular piece of the Content;
- Not to make copies, give, sell, resell, loan, rent, offer, broadcast, send, distribute, transfer, communicate to the public, reproduce, modify, display, perform, commercially exploit or make the Content available unless otherwise authorized in the applicable Terms and to advise Nokia promptly of any such unauthorized use;

- 
- Not to remove, circumvent, reverse engineer, decrypt, or otherwise alter or interfere with any applicable usage rules or attempt to circumvent digital rights management or copy protection features associated with the Content or any other technologies used to control the access to or use of the Content or its identifying information;
  - Not to use any automated systems or means, except for those provided by us, for the selection or downloading of the Content;
  - Not to give out your password or otherwise allow other people to access the Content. The restrictions on copying that apply to applicable media also apply to the Content accessed as part of this Service.

The Content is owned and/or controlled by Nokia and/or its respective licensors and is protected by intellectual property laws. The third party Content provider is solely responsible for any Content it provides, any warranties to the extent that such warranties have not been

disclaimed and for any claims you may have relating to that Content or your use of that Content. However, Nokia may enforce the third party Content license terms against you as a third party beneficiary of those terms. The third party Content providers are third-party beneficiaries under these Terms and may enforce the provisions that directly concern the Content in which they have rights. Nokia may be acting as an agent for third party Content provider in providing the Content to you. Nokia is not a party to the transaction between you and the third party Content provider for such Content.

## **7. Allegations of Copyright Infringement**

You may notify Nokia of copyright infringement on the Service by providing notice (a) by email with “Copyright Notification” in the subject line to [copyright.notices@nokia.com](mailto:copyright.notices@nokia.com), (b) by a document titled “Copyright Notification” mailed to Nokia, Attn: Copyright Agent, 102 Corporate Park Drive, White Plains, NY 10604, USA or (c) via the online form, if available. Your notice must:



- 
1. identify the original copyrighted work you claim is infringed;
  2. identify the content on the Service that you claim is infringing the copyrighted work. Please provide enough detail for Nokia to locate the allegedly infringing content on the Service;
  3. provide your contact information, including your full name, mailing address, telephone number, and email address, if available;
  4. provide a statement that you have a good faith belief that the use of the content in the manner complained of is not authorized by the copyright owner, its agent, or the law;
  5. provide this statement: "I swear, under penalty of perjury, that the information in this notification and complaint is accurate and that I am the copyright owner, or am authorized to act on behalf of the copyright owner of an exclusive right that is infringed."; and
  6. provide your signature, as applicable.

## **8. Notices**

Nokia may post notices within the Service. Nokia may also send you

notices about products and Services to the email address or telephone number you have provided to us. You are deemed to have received such notices at the latest within seven (7) days from Nokia sending or posting those. Your continued use of the Services constitutes your receipt of all notices regardless of delivery method.

## **9. Fees**

Your use of the Service may be or may become subject to charges.

Any fees charged by Nokia will be announced separately in connection with the Service.

Use of the Service may involve transmission of data through your service provider's network. Prices listed within the Service do not include possible data transmission, text message, voice or other service provision charges by your network service provider.

Nokia assumes no responsibility for the payment of any charges of your service providers.

## **10. Order and Payment Terms**

"Order" shall mean the selection of payable Content and/or subscription

---

to Content offered by Nokia and available in the Service and submission of payment method, as well as submitting the order by selecting the "buy", "ok", "I accept" or other similar confirmation of acceptance in the order flow or providing other indication of acceptance terms that are presented to you in the order flow.

To place an Order within the Service, you must have reached the age of legal competence according to the applicable legislation. If you have not reached the age of legal competence, you may place Orders only with the prior consent of your parent or legal guardian.

You agree that all Orders shall be legally valid and binding. All Orders are subject to acceptance by Nokia.

You may pay by credit or debit card, network service provider billing, or other payment methods if available.

Your credit or debit card must have a billing address in the country where the Content is offered by the Service. Nokia will charge your credit card or debit your bank account within a reasonable time after you have made your Order. All credit card payments

are subject to validation checks and authorization by the card issuer.

If you choose network service provider billing, charges will appear on your mobile phone bill or be deducted from your prepaid account if it is a prepaid account. Some network service providers may subject your usage of the Service to additional terms and conditions including placing limits on the amount of charges possible with network service provider billing. Charges in excess of network service provider limits or account balance may be rejected.

You agree to pay the charges related to your Order, to ensure that the instrument of payment is valid at the time of the Order, that you are the rightful holder of the instrument and that the instrument is used within its credit limits.

The Content that is delivered is licensed to you. You agree to use such Content solely as permitted in these Terms and in any additional terms that you may be presented in the order flow.

The Service may offer subscriptions. You authorize the Service to place a periodical charge during the period of

---

the subscription. The Service may also offer a trial period. If your Order involves a trial period (also known as try-and-buy), you may be charged when the trial period expires, unless you cancel in accordance with the subscription/trial terms.

The prices in the Service may change from time to time. Prices include applicable taxes in effect at the time of your transaction, unless otherwise stated. There may be instances where you incur additional charges from your bank or credit card provider based on currency conversion rates used and/or additional fees assessed. Nokia assumes no responsibility for the payment of bank or any other third party service fees or charges.

### **11. Cancellations and Refunds**

You agree to the electronic delivery of Content being initiated concurrently with the placement of your Order. You will not be able to cancel your Order once it has been processed. The nature of the Content is such that it cannot be returned.

In the event that after your Order you discover and promptly inform Nokia within 48 hours that (a) the Content you have ordered is faulty; (b) the

Content Nokia delivers to you does not match the description of the Content you ordered via the Service; or (c) technical problems delayed or prevented delivery of your Content or accidental multiple orders caused by such technical problems, your sole and exclusive remedy with respect to such Content will be either replacement of such Content, or refund of the price paid for such Content, as determined solely by Nokia. Otherwise, no refunds are available. If you encounter any of the above issues, please contact Nokia Customer Support.

Please note that Nokia may not be able to process your customer support request if you are unable to provide your transaction ID, which is provided to you by Nokia following your Order from the Service. Nokia may only process refunds for Content where the total price is above the monetary limit stipulated in applicable local legislation.

### **12. Feedback to Nokia**

By submitting any ideas, feedback and/or proposals ("Feedback") to Nokia through the Service or other means, you acknowledge and agree that: (1) Nokia may have similar

---

development ideas to the Feedback; (2) your Feedback does not contain confidential or proprietary information of you or any third party; (3) Nokia is not under any obligation of confidentiality with respect to the Feedback; (4) Nokia may freely use, distribute, exploit and further develop and modify Feedback for any purpose; and (5) you are not entitled to any compensation of any kind from Nokia.

### **13. Social Activities and Location Sharing**

You may use features in the Service to share your location, status, content, Materials or personal information or to interact with other users, sites and services. By using these features you agree that Nokia may use and provide that information to other services and persons with whom you choose to interact or share this information. Users of these services and persons, such as your contacts, may see your location, status and/or personal information. In using these features you agree not to share information, Content or Material or to link to any service or site that: (a) contains content or other material that is illegal or inappropriate; or (b) exploits intellectual property rights without

authorization or encourages users to piracy. Any interaction does not involve Nokia and is solely between you and the other user(s).

### **14. Availability and Technical Requirements**

The availability of Content and the Service may vary and is subject to Nokia's sole discretion. Nokia expressly disclaims any representation or warranty that any particular Content or Service will be available. The Service may not be available in all countries and may be provided only in selected languages. The Service, operations and some features may also be dependent on the network, compatibility of the devices used and the content formats supported.

To access the Service, you may need to download a specific piece of software developed by Nokia or by another party.

Nokia may, in its sole discretion, change, correct or discontinue the Service in whole or in part. The Service may not be available during maintenance breaks and other times. To ensure you have the latest Nokia device software and applications,

---

your device may automatically check for the availability of software updates from Nokia. If any are detected you will be prompted to approve the installation. You may disable automatic checking for updates through settings in your device. You may also install software through available software update channels. If Nokia considers a Software update to be important or critical you may not continue using the previous version of the Software. Nokia may prevent your use of the previous version of the Software or Service until you install the update.

Nokia may disable any Content or Software contained in your Service account for any reason and remove any Content or Software and/or disable copies of any application on your device in order to protect the Service, application providers, wireless carriers over whose network you access the service or any other affected or potentially affected parties.

A particular service may be a pre-release version, for example a beta release, and may not work in the way a final version works. Nokia may significantly change any version of

Service or Software or decide not to release a final version.

## **15. Links to Third Party Sites and Content**

Nokia may include access to sites and services on the Internet or preloaded clients that enable you to interact with sites and services that are owned or operated by third parties and that are not part of the Service. You must review and agree to the terms and conditions of these sites or services before using these sites or services.

Nokia has no control over the third party content, sites or services and assumes no responsibility for services provided or material created or published on these third-party sites or services. A link to a third-party site does not imply that Nokia endorses the site or the products or services referenced in the site.

In addition, you and other users may create content and links to content within the Service that has not otherwise been submitted to the Service. Nokia is not responsible for this type of content or links.

## **16. Advertisements**

---

Service may include advertisements. Advertisements may be targeted to the content or information stored on the Service, queries made through the Service, or other information.

## **17. Personal Data**

The Privacy Policy and any additional privacy information made available to you govern the use of your personal data.

## **18. Limitation of Liability**

The Service is provided on “AS IS” and “AS AVAILABLE” basis. Nokia does not warrant that the Service will be uninterrupted or error or virus-free. No warranty of any kind, either express or implied, including but not limited to warranties of title, non-infringement, merchantability, or fitness for a particular purpose, is made in relation to the availability, accuracy, reliability, information or content of the Service. You expressly agree and acknowledge that the use of the Service is at your sole risk and that you may be exposed to content from various sources.

Except for liability for death or personal injury caused by its gross negligence or intentional misconduct, Nokia is not liable for any direct

damages caused by your use or inability to use the Service. In no case will Nokia be liable for any indirect, incidental, punitive or consequential damages resulting from your use or inability to use the Service.

## **19. Indemnification**

You agree to defend and indemnify Nokia from and against all third party claims and all liabilities, assessments, losses, costs or damages resulting from or arising out of (i) your breach of the Terms, (ii) your infringement or violation of any intellectual property rights, other rights or privacy of a third party, or (iii) misuse of the Service by a third party where the misuse was made possible by your failure to take reasonable measures to protect your username and password against misuse.

## **20. Miscellaneous**

### **20.1 Choice of Law**

The Terms are governed by the laws of Finland without regard to its conflicts of law provisions.

### **20.2 Validity**

The Terms neither exclude nor limit any of your mandatory rights in your country of residence that cannot by

---

law be waived. If a provision of the Terms is found to be invalid, the remaining provisions will not be affected and the invalid provision will be replaced with a valid provision that comes closest to the result and purpose of the Terms. In the event one or more provisions of these Terms are not relevant to your use of the Service, it shall not impact the validity or enforceability of any other provision of the Terms or the Terms as a whole. If there is any conflict between these Nokia Service Terms and the Privacy Policy, the provisions of these Nokia Service Terms prevail. The provisions of the Terms that are intended to survive termination of your registration remain valid after termination.

### **20.3 Changes in Terms**

Nokia may modify the Terms at any time without prior notice. If the Terms are changed in a material, adverse way, Nokia will provide a separate notice advising of the change.

You are responsible for regularly reviewing the Terms. Your continued use of the Service constitutes your consent to any changes and modification.

### **21. Intellectual Property**

The Service, Content and Software are protected under international copyright laws. Nokia claims copyrights in its Service, Content, and Software to the maximum extent of the law. Subject to the Terms, Nokia retains all right, title and interest in the Service, its Content, the Software and in all other Nokia products, software and other properties provided to you or used by you through the Service.

### **22. Assignment**

Nokia may assign its rights and obligations under these Terms to its corporate parent, its subsidiaries, or to any company under common control with Nokia. Additionally, Nokia may assign its rights and obligations under these Terms to a third party in connection with a merger, acquisition, sale of assets, by operation of law or otherwise.

### **WE CARE ABOUT YOUR PRIVACY**

Nokia is committed to protecting your privacy and to complying with applicable data protection and privacy laws. This Privacy Policy ("Policy") explains how we process personal data. Throughout this Policy the term

---

“personal data” means information relating to an identified or identifiable individual (i.e. a natural person). “Nokia” refers to Nokia Corporation, including its affiliates (also referred to as “we”, “us”, or “our”). This Policy applies for processing of your personal data where Nokia is the data controller or where we refer to the applicability of this Policy.

We may provide additional privacy information in connection with our products and services through service descriptions and other notices. Such information prevails over this Policy to the extent of any conflict.

Third party services installed on your device may allow access to information available on your device. Our products or services may contain links to other companies’ websites and services that have privacy policies of their own. We recommend that you read the privacy policies of such third party services. Nokia is not responsible for the privacy practices or contents of any such third party services.

**By using this website and/or by submitting personal data to Nokia, you agree to the processing of your personal data as explained in this**

**Policy. If you do not agree with this Policy, please do not use this website or provide Nokia with your personal data.**

### **What Data Do We Collect?**

We collect your personal data typically when you make a purchase, use or register into our products and services, take part in a campaign or otherwise interact with us. Below are examples of the categories of data we collect.

- **Your use of our products and services** When you use our products and services your IP-address, access times, the website you linked from, pages you visit, the links you use, the content you viewed and other such information your browser provides us with is automatically collected by Nokia. Some of our mobile services may collect your unique mobile device identifiers, subscriber identity information, network service provider specific identifiers, network settings and other such information. When you use our products and services or otherwise interact with us over



---

telecommunications networks, certain additional information, such as your mobile subscription number, may be transmitted to us by your mobile network provider.

- **Information you provide us**

**with** We may ask you to provide us with information such as your name, email address, street address, user names and passwords, your consents, preferences and feedback, information relating to your devices, age, gender, postal code and language preferences. Please note that certain non-identifiable information collected from you may become personally identifiable when you provide us with your personal data. We may also obtain, in accordance with applicable law, some personal data from list-rental companies and other such publicly available sources. Some of our services may allow you to submit information about other people, for example, if you make an order for a product that you wish us to send directly to another recipient.

- **Your transactions with us** We collect information relating to your purchase and use of our products and services and your other interactions with us. Such information may include details of the queries or requests you have made, the products and services provided, delivery details, bank account number, credit card details, billing address, credit checks and other such financial information, details of agreements between you and Nokia, records of contacts and communications, information and details relating to the content you have provided us with and other such transactional information. We may, in accordance with applicable law, record your communication with our customer care or with other such contact points.

- **Location data** Nokia's location based services and features may use satellite, Wi-Fi or other network based location data, for example your IP-address. Assisted positioning methods of the device, for example

---

Assisted GPS, provide you with faster and more accurate location data. Use of assisted positioning methods may involve exchanging your location data, wireless network identifiers along with your unique device or network service provider identifiers with a location server. Nokia processes this information anonymously. Depending on your positioning settings and your use of location services of other service providers your device may connect to other service providers' servers, which are not controlled or operated by Nokia. We recommend you to check the privacy policies of such service providers to understand how they process your location data. You can modify the positioning settings of your device from the device settings, for example change or disable positioning methods or location servers or modify the accuracy of your location data.

Nokia offers various location based services and features that may require the use of your

location data. For example when you make a location based search, use location enhanced weather features or request for map data, your location data may be sent to Nokia to serve you with the right content. This may also include location based advertising. Some location based services may allow you to associate your personal data with your location. To learn more about available location based services and features, please refer to instructions and other support material for our products and services.

### **Why Do We Process Personal Data?**

Nokia may process your personal data for the following purposes. Please note that one or more purposes may apply simultaneously.

- **Providing products and services** We may use your personal data to provide you with our products and services, to process your order or as otherwise may be necessary to perform the contract between you and Nokia, to ensure the functionality and security of our products and services, to

---

identify you as well as to prevent and investigate fraud and other misuses.

- **Developing products and services** We may use your personal data to develop our products and services. However, for the most part we only use aggregate and statistical information for such purposes. We may combine personal data collected in connection with your use of a particular Nokia product and/or service with other personal data we may hold about you, unless such personal data was collected for a different purpose.
- **Communicating with you** We may use your personal data to communicate with you, for example to send you critical alerts and other such notices relating to our products and/or services and to contact you for consumer care related purposes.

**Marketing and making recommendations** We may use your personal data to personalize our offering and to provide you with more

relevant services, for example, to make recommendations and to display customized content and advertising in our services. This may include displaying Nokia and third party content. We may use your personal data for direct marketing or research purposes, for example, to conduct market research and we may, in accordance with applicable law, contact you to inform you of new products, services or promotions we may offer.

### **First use of your Nokia device**

Depending on your device a Nokia Account may be created for you or you may need to sign in with your existing Nokia Account when you first use your device. In the activation process your user name, email address, mobile number, unique mobile device identifier and subscriber identity information will be sent to Nokia and we may associate this information with your Nokia Account. This combined information may be used to activate your warranty and certain software licenses and to send you personalized messages, for example emails, text and other messages. These messages may include information about Nokia's products

---

and services, such as tips and commercial offers. You may unsubscribe from these messages at any time for example by following the information in the message you receive after taking your device into use, instructions in the device or in the messages, through available profile management tools or contacting Nokia customer care. The collected information may also be used to display personalized content as well as to improve Nokia's products and services. The above information may also apply in case you update the software of your device.

### **Do We Share Personal Data?**

We do not sell, lease, rent or otherwise disclose your personal data to third parties unless otherwise stated below.

- **Your consent and social sharing services** We may share your personal data if we have your consent to do so. Some services may allow you to share your personal data with other users of the service or with other services and their users. Please consider carefully before disclosing any personal data or

other information that might be accessible to other users.

- **Nokia companies and authorized third parties** We may share your personal data with other Nokia companies or authorized third parties who process personal data for Nokia for the purposes described in this Policy. This may include for example billing through your network service provider or otherwise, delivery of your purchases, providing services including customer service, managing and analyzing consumer data, credit checks, conducting market research and managing marketing and other such campaigns. When you purchase a Nokia product from us with a network service provider plan, we may need to exchange information with your network service provider to provide you with such service.

We may conduct joint marketing and other communications with our partners, for example your mobile operator. To avoid duplicate or unnecessary communications and to tailor

---

the message to you we may need to match information that Nokia has collected with information that the partner has collected where this is permitted by law.

These authorized third parties are not permitted to use your personal data for any other purposes. We require them to act consistently with this Policy and to use appropriate security measures to protect your personal data.

- **International transfers of personal data** Our products and services may be provided using resources and servers located in various countries around the world. Therefore your personal data may be transferred across international borders outside the country where you use our services, including to countries outside the European Economic Area (EEA) that do not have laws providing specific protection for personal data or that have different legal rules on data protection, for example, the United States of America. In such cases we take steps to

ensure that there is a legal basis for such a transfer and that adequate protection for your personal data is provided as required by applicable law, for example, by using standard agreements approved by relevant authorities (where necessary) and by requiring the use of other appropriate technical and organizational information security measures.

- **Mandatory disclosures** We may be obligated by mandatory law to disclose your personal data to certain authorities or other third parties, for example, to law enforcement agencies in the countries where we or third parties acting on our behalf operate. We may also disclose and otherwise process your personal data in accordance with applicable law to defend Nokia's legitimate interests, for example, in civil or criminal legal proceedings.
- **Mergers and Acquisitions** If we decide to sell, buy, merge or otherwise reorganize our businesses in certain countries, this may involve us disclosing

---

personal data to prospective or actual purchasers and their advisers, or receiving personal data from sellers and their advisers.

### **How Do We Address The Privacy of Children?**

Nokia products and services are typically intended for general audiences. Nokia does not knowingly collect information of children without the consent of their parents or guardians. Nokia publishes safety guidelines for using internet services in our websites.

### **How Do We Address Data Quality?**

We take reasonable steps to keep the personal data we possess accurate and to delete incorrect or unnecessary personal data.

As certain Nokia products and services may allow you to manage your profile, we encourage you to access your personal data from time to time to ensure that it is correct. Please remember that in case of any changes it is your responsibility to update the personal data you have provided us with.

### **What Steps Are Taken To Safeguard Personal Data?**

Privacy and security are key considerations in the creation and delivery of our products and services. We have assigned specific responsibilities to address privacy and security related matters. We enforce our internal policies and guidelines through an appropriate selection of activities, including proactive and reactive risk management, security engineering, training and assessments. We take appropriate steps to address online security, physical security, risk of data loss and other such risks taking into consideration the risk represented by the processing and the nature of the data being protected. Also, we limit access to our data bases containing personal data to authorized persons having a justified need to access such information.

### **How Do We Use Cookies and Web Beacons?**

Cookies are small text files that are sent to your computer by a web server. We use cookies to provide benefits to you. Session cookies remember the previous activity performed by you, for example an

---

item you placed in a shopping cart. Persistent cookies are used to save your preferences over multiple sessions, for example personalization of settings on our websites. Cookies may be used to display targeted ads and recommendations, for example to eliminate showing the same ads to you multiple times or showing ads that we think are of interest to you based on your past actions on our website. Cookies are also used to determine the effectiveness of our promotions and advertising campaigns and to improve our products and services.

Nokia may use web beacons (or “pixel tags”) in connection with some of our websites. However, we do not use them to identify individual users personally. Web beacons are typically graphic images that are placed on a website and they are used to count visitors to a website and/or to access certain cookies. This information is used to improve our services. Web beacons do not typically collect any other information than what your browser provides us with as a standard part of any internet communication. If you turn off cookies, the web beacon will no longer be able to track your specific activity.

The web beacon may, however, continue to collect information about visits from your IP-address.

Some Nokia websites or applications may utilize so called locally stored objects, such as Flash local shared objects (“Flash cookies”) or HTML5 Web Storage. Locally stored objects are used for similar purposes as cookies but typically may contain a greater amount and different types of data than browser cookies. For example, in Flash you can use the Flash Player Settings Manager to control the storage of local shared objects, including disabling the local shared objects for certain websites only or disabling the storage of local shared objects completely for all websites.

Some Nokia websites use third party advertising technologies, such as DoubleClick, to serve ads. DoubleClick uses a cookie to collect information about your visits to Nokia and third party websites. This information will be used to serve ads on Nokia and third party websites. The collected information will not be directly personally identifiable nor will DoubleClick share the information with third parties. You may choose to

---

disable the DoubleClick cookie at any time by using DoubleClick opt-out cookie. You may also go to <http://networkadvertising.org/> to install an opt-out cookie.

Most browsers allow you to disable or allow the use of cookies. You may also delete the cookies on your computer if your browser so permits. If you disable cookies, you may not be able to use certain parts of our services and you may need to re-install the opt-out cookie.

### **What Are Your Rights?**

You have a right to know what personal data we hold about you. You have a right to have incomplete, incorrect, unnecessary or outdated personal data deleted or updated. You have a right to request that we stop processing your personal data for direct marketing or market research purposes. However, if you opt-out from marketing and other communications from Nokia, we may still send you critical alerts pertaining to our products and services or contact you for these purposes.

You may exercise your rights by contacting us through the contact points referred to below. In some

cases, especially if you wish us to delete or stop processing your personal data, this may also mean that we may not be able to continue to provide the services to you. Please note that Nokia may need to identify you and to ask for additional information in order to be able to fulfill your request. Please also note that applicable law may contain restrictions and other provisions that relate to your rights.

We encourage you to use available profile management tools, for example Nokia Account for the above purposes as such tools often provide you with direct access to your personal data and allow you to effectively manage it.

### **Who Is The Controller of Your Personal Data?**

Nokia Corporation of Keilalahdentie 4, 02150 Espoo, Finland is the controller of your personal data.

In addition, the Nokia affiliate providing the product or service may be a controller of your personal data. You may find the identity of the controller and its contact details by reviewing the terms and conditions of such a product or service or by using



---

contact information provided in the applicable Nokia websites.

In matters pertaining to Nokia's privacy practices you may also contact us at:

Nokia Corporation

c/o Privacy

Keilalahdentie 4

02150 Espoo, Finland

### **US Safe Harbor Privacy Framework**

Nokia Inc., 102 Corporate Park Drive, White Plains, NY 10604 USA adheres to the EU-US/Swiss-US Safe Harbor Privacy Principles of Notice, Choice, Onward Transfer, Security, Data Integrity, Access and Enforcement, and is registered with the U.S. Department of Commerce's Safe Harbor Program. If you have questions or concerns about Nokia's participation in the Safe Harbor Framework, please contact:

Nokia Inc.,

102 Corporate Park Drive,

White Plains, NY 10604 USA.

Attention: Legal Director, North America.

If you believe Nokia Inc. has not satisfactorily addressed your data privacy concerns, you may contact the EU Data Protection Panel at: Data Protection Panel Secretariat, Rue de Luxembourg 46 (01/126) B-1000 Brussels, BELGIUM, or by visiting <http://circa.europa.eu/Public/irc/secureida/safeharbor/home>.

### **Changes to This Privacy Policy**

Nokia may from time to time change this Policy or change, modify or withdraw access to this site at any time with or without notice. However, if this Policy is changed in a material, adverse way, Nokia will post a notice advising of such change at the beginning of this Policy and on this site's home page for 30 days. We recommend that you re-visit this Policy from time to time to learn of any such changes to this Policy.

### **Copyright and other notices DECLARATION OF CONFORMITY**

**CE 0434**

**CE 0168**

---

Nokia is transitioning between EU Notified Bodies and this product has been approved as complying with EU regulations with both Notified Bodies. Either of the CE marks shown may appear on the product during this transition period.

Hereby, NOKIA CORPORATION declares that this RM-781 product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A copy of the Declaration of Conformity can be found at <http://www.nokia.com/global/declaration>.

© 2012 Nokia. All rights reserved.

Nokia, Nokia Connecting People are trademarks or registered trademarks of Nokia Corporation. Nokia tune is a sound mark of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited. Nokia operates a policy of continuous development. Nokia reserves the right to make

changes and improvements to any of the products described in this document without prior notice.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.



Java and all Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Nokia is under license.

This product is licensed under the MPEG-4 Visual Patent Portfolio License (i) for personal and noncommercial use in connection with information which has been encoded in compliance with the MPEG-4 Visual Standard by a consumer engaged in a personal and noncommercial activity and (ii) for use in connection with MPEG-4 video provided by a licensed video provider.

---

No license is granted or shall be implied for any other use. Additional information, including that related to promotional, internal, and commercial uses, may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

To the maximum extent permitted by applicable law, under no circumstances shall Nokia or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

For the most current product info, please refer to [www.nokia.com.hk](http://www.nokia.com.hk).

Nokia does not provide a warranty for or take any responsibility for the functionality, content, or end-user

support of third-party apps provided with your device. By using an app, you acknowledge that the app is provided as is. Nokia does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device.

The availability of Nokia services may vary by region.

## **FCC/INDUSTRY CANADA NOTICE**

This device complies with part 15 of the FCC rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Your device may cause TV or radio interference (for example, when using a device in close proximity to receiving equipment). If you require assistance, contact your local service facility. Any changes or modifications not expressly approved by Nokia could void the user's authority to operate this equipment.

---

Some operations and features are SIM card and/or network dependent, MMS dependent, or dependent on the compatibility of devices and the content formats supported. Some services are subject to a separate charge.

---

# Index

<b>A</b>		
access codes	78	call barring 35
accounts	50	conference 33
alarm clock	21	emergency 90
alarms	21	forwarding 34
anniversary entries	23	log 31, 32
apps	29	making 30, 32
		voicemail 34
<b>B</b>		camera
backing up data	73	recording videos 54
battery	84, 85	sending photos and videos 57
charging	11, 12	taking photos 53
inserting	9	charging the battery 11, 12, 84
birthday entries	23	chat services (IM) 52
Bluetooth	65, 66	clock 20, 21
browser	63	contacts
<i>See</i> web browser		adding 36
		copying 17, 39
<b>C</b>		groups 38, 45
cable connection	67	saving 36, 39
cache	64	converter 26, 27
calculator	25	copying content 17, 58, 67
calendar	22, 23	<b>D</b>
calls		data connections
answering	30	Bluetooth 65

---

date and time	20	<b>K</b>	
dictionary	28	keyguard	15
downloads		keys and parts	7
apps	29	<b>L</b>	
games	29	lock code	68, 78
<b>E</b>		locking	
emergency calls	90	keys	15
<b>F</b>		phone	68
factory settings, restoring	77	screen	15
file management	69, 70	loudspeaker	60
flight profile	18	lunar calendar	24
FM radio	61	<b>M</b>	
<b>G</b>		mail	
games	29	accounts	50
<b>H</b>		creating	51
home screen	41, 42	mailbox	50
<b>I</b>		sending	51
IM (instant messaging)	52	setup	50
IMEI number	78	mailbox	
indicators	18	voicemail	48
internet	63	meeting entries	22
		memory	71
		memory card	10, 69, 70

messages		powering on/off	13
attachments	47	profiles	
audio	49	creating	43
sending	44, 45	personalising	40, 43
MMS (multimedia message service)	44	PUK codes	78
multimedia messages	44		
music	59	<b>R</b>	
copying	58	radio	61
		recording	
<b>N</b>		calls	62
Nokia original accessories	80	sounds	62
Nokia support information	72	videos	54
		restoring data	73
<b>O</b>		restoring settings	77
offline profile	18	ringtones	40
		<b>S</b>	
<b>P</b>		security code	68, 78
personalising your phone	40, 41, 42, 43	settings	
Phone switch	17	restoring	77
photos		shortcuts	41
copying	17, 67	SIM card	
editing	56	inserting	9
organising	55	SMS (short message service)	44
sending	57	software updates	74, 75, 76
taking	53		
PIN codes	78		

---

speed dialling	37	recording	54
strap	16	sending	57
support	72	voicemail	48
switching on/off	13	volume	16

## T

taking photos	
<i>See</i> camera	
text input	46
text messages	44
themes	42
time and date	20
tones	
personalising	40
touch screen	14
transferring content	17, 58, 67
turning on/off	13

## U

updates	
phone software	74, 75, 76
USB connection	67

## V

videos	
copying	17, 67

## W

web	63
web browser	
browsing pages	63
cache	64
cookies	64